




P3CARS.COM
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from www.p3cars.com/install

Gauge Assembly for Ford F150

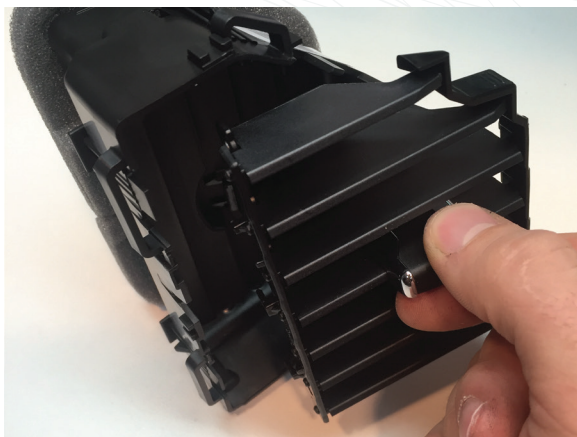

1 Remove horizontal slat assembly from the vent housing.



2 Remove the top 3 horizontal slats from the vent slat assembly.



3 Insert display into the vent slat assembly.




4 Remove the vertical slat assembly from the vent housing.

WARRANTY & LIABILITY:

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.



5 Measure down 1" from the top of the vent housing and cut a 7/16" slot as shown in picture.

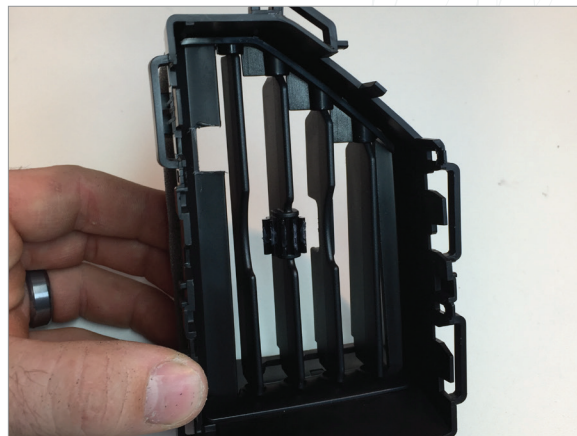

6 Reinstall vertical slat assembly into vent housing.



P3CARS.COM
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from www.p3cars.com/install



7 With the horizontal slider all the way to the left and vertical slats all the way open, reinstall the slat assembly with display. (Feed display wire through the slot cut in step 5)



8 Be sure the display cable is flat against the vent housing so it will not interfere with the vertical slats.



9 You are now ready to install your vent into your vehicle.

WARRANTY & LIABILITY:

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.

