




P3CARS.COM
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from www.p3cars.com/install

BMW F10 Vent Install



1 Release the clips on the top of the vent with your finger or a trim pry tool.

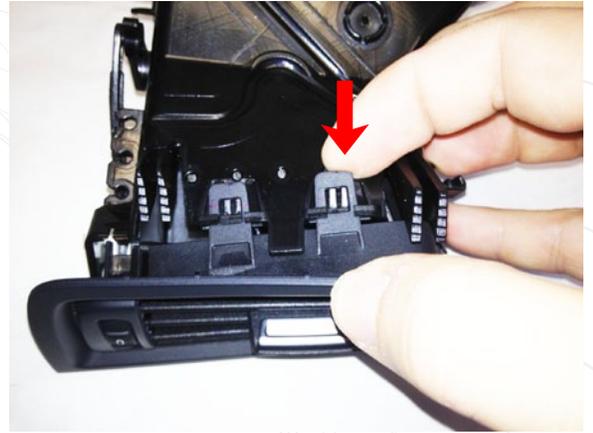

2 Push forward as you release the clips to slide the catch over the retainer




3 Repeat the clip releasing procedure on the sides and bottom of the vent.



4 Work your way around the vent releasing all clips until the front face of the vent is free.

WARRANTY & LIABILITY:

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.

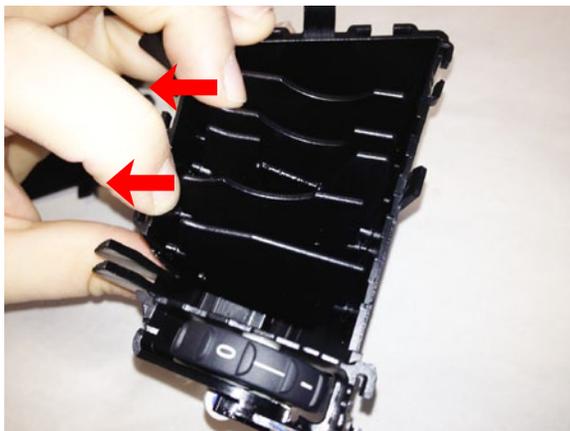

5 Using your fingers flex the top of the vent upwards to release all of the inner vertical slats of the vent. After all inner slats are removed set them aside in a safe place in case you wish to return your vent to stock.





P3CARS.COM
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from www.p3cars.com/install



6 On the vent face, carefully remove the top two slats, taking care to leave the remaining 3 slats in their proper position and still connected with the vertical metal positioner.



7 Fully re-unite the vent front with the rear hosing and make sure the remaining bottom 3 slats are installed correctly and move up and down as intended.



8 Feed the cable from the p3 VIDi display unit through the top rear of the vent.



9 Insert the side of the display shown here into the un-occupied vent slat holes from the vent slats we removed.

WARRANTY & LIABILITY:
Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.



10 Apply pressure to the other side of the VIDi display unit to complete the installation. Pressing the display in and towards the driver side will make it pop in easily.



You're Done!
See the car install video at p3cars.com/install

Please be sure to read the operation and configuration guides. If you have any questions please e-mail support@p3cars.com