



For additional install information please visit www.p3gauges.com/install

Jeep WK2 Vent Install Guide



1 Remove dash side panel



2 Move steering wheel down and toward driver



3 Remove steering column trim panel by pulling toward driver



4 Remove hex bolt above steering column

WARRANTY & LIABILITY: Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.



5a Pull lower dash trim toward driver to release clips



5b Remove hex bolt below vent trim



For additional install information please visit www.p3gauges.com/install




6a Use a trim pry tool to remove vent trim as shown



6b



7a Use a trim pry tool to release clips on vent housing

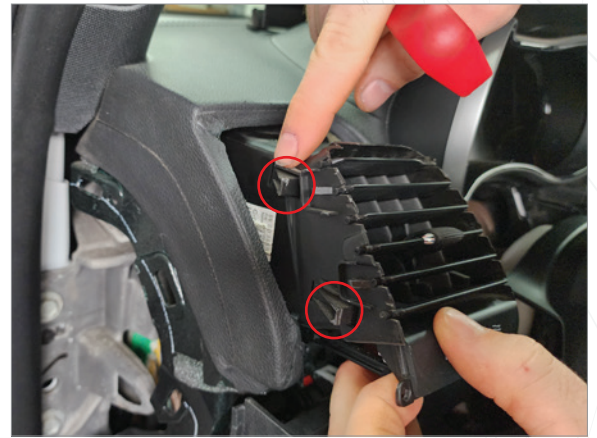

7b

WARRANTY & LIABILITY:
Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.




8a Feed OBD2 cable up through dash as shown and plug OBD2 connector into OBD2 port



8b Top view of OBD2 cable routing



For additional install information please visit www.p3gauges.com/install

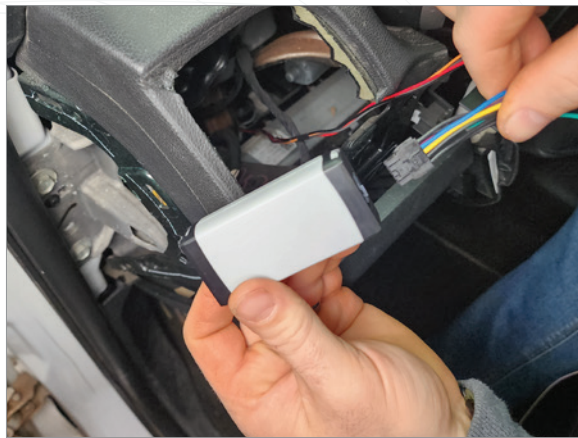

9 Plug Main Harness into Control Box



10 Plug Display Cable into Control Box



11 After installing display into vent replace vent trim



12 Reinsert Vent into dash, replace bolts and trim

WARRANTY & LIABILITY:
Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.

