



## Digital Vent Guage Installation Documentation



For questions regarding installation instructions as well as an install video, please visit [www.p3cars.com/support](http://www.p3cars.com/support).

**WARRANTY & LIABILITY** Neither P3 Cars, VEI Systems, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 1 year from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts. Warranty void if product is damaged from improper use. For off-road use only.

## OPTIONAL Piggyback ECU Map Switch Control


Connecting the gauge to your PROcede v3 or higher tuning system allows you to DIRECTLY select 3 maps from the PROcede while you are driving! Plug the gauge in as shown, you need to make sure that the mapswitch wire goes to the BLUE wire on the gauge, and the PURPLE wire on the PROcede mapswitch input. In the PROcede user software, set the "ON BUTTON MAP" to 1, and the "OFF BUTTON MAP" to 2. Also, make sure that Valet mode is enabled so that you can also access MAP 0 (valet). The gauge will now directly select your map, from the on screen boost control menu, and keep your selections forever, until you change them! To enter the piggyback map selector mode on the gauge, make sure your gauge is configured in the CFG menu to b.Pc, and then while the gauge is running, if you hold the peak recall button, you will get a menu with the following options. This mode will auto-exit and select your map upon exit.

### PROcede V3

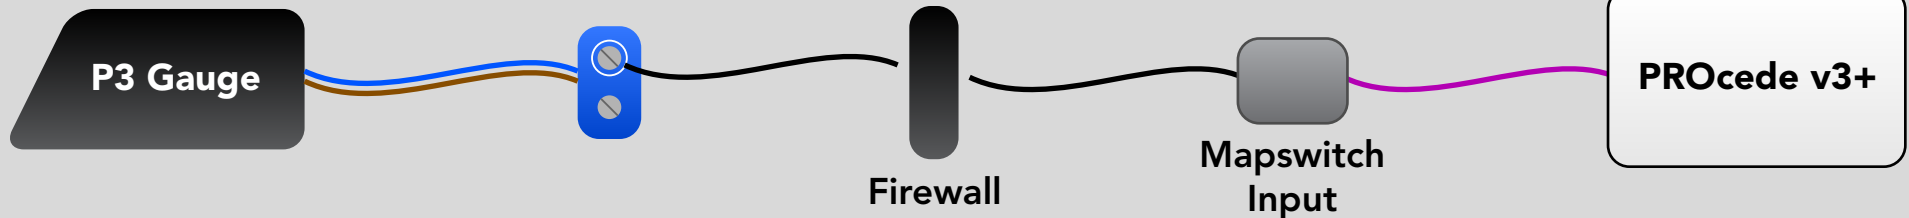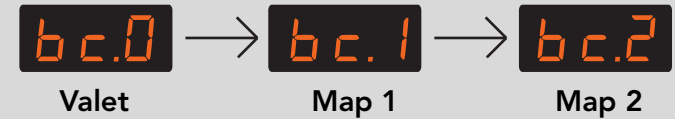

Connecting the gauge to your Juicebox 3 tuning system allows you to DIRECTLY select 4 maps while you are driving, with access to ALL 8+ maps of the system by programming bc.2 using the pedal switcher. Plug the gauge in as shown, The gauge will now directly select your map, from the on screen boost control menu, and keep your selections forever, until you change them! To enter the piggyback map selector mode on the gauge, make sure your gauge is configured in the CFG menu to b.Jb, and then while the gauge is running, if you hold the peak recall button, you will get a menu with the following options. This mode will auto-exit and select your map upon exit. The gauge emulates a physical map switch, and therefore bc.1, bc.3, bc.4 will be based on your current jb3 firmware. Contact Burger Motorsports for details on each map. bc.2 will ALWAYS be your pedal selected map, and will be persistent between switches. This allows you to program bc.2 to whatever you want, and switch to it in real-time. If you are unsure of your jb3 version, leave the gauge in bc.2 until you know what the other maps are.

### JuiceBox 3

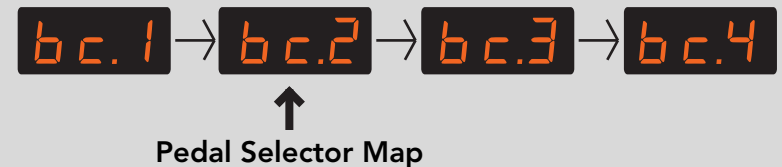

When this map is selected, it will remember your map selected with the gas pedal switcher in jb3 1.2+

